



RF1250 Operations



1. Left Hand Front Hydraulic Brake Lever
2. Headlight and Horn
3. Main Control
 - a. Hold  To Turn the bike ON or OFF
 - b. Press + to Increase Pedal Assist Power
 - c. Press – to Decrease Pedal Assist Power
 - d. Hold + to turn on Display Backlight
 - e. Hold – to activate WALK mode
 - f. Hold  and – To Reset Trip Data
 - g. Hold + and – to enter Programming
 - i. Choose KM or MPH
 - ii. Set MAX Speed
 - iii. Set Display Backlight Level
4. Main Display
 - a. Rear Battery Charge Indicator
 - b. Pedal Assist Level 0 – 5
 - c. MPH
 - d. TRIP / OD
5. Pedal Gear Shifter
6. Motor Selector Switch
 - a. Right for Rear Wheel Drive
 - b. Center for All Wheel Drive

- c. Left for Front Wheel Drive
- 7. Right Hand Rear Hydraulic Brake Lever
- 8. Twist Throttle

Front Battery



1. Lock – Must insert key and hold in the clockwise position to remove battery
2. Pull Handle – Provides safe leverage to assist in battery removal
3. Battery Charging Port

Press button for Front Battery Charge Indicator



Rear Battery Charge Port

